



TIPS FOR CLEANING YOUR DISHWASHER

LOW PRICE
HIGH PERFORMANCE


made in germany

Inhalt der Präsentation ist Eigentum der HOBART GmbH

1. DRAINING THE MACHINE

After usage, allow the machine to drain completely so all dirty water is removed.

Close the door, press and hold the drain button for minimum 3 seconds.

During pump out, the drain button LED flashes.

The wash chamber of the machine is automatically cleaned. For machines with a drain pump, the tank is emptied. At the end of the programme the machine switches off automatically. Remove any coarse residues afterwards.

► Versions with stand pipe: Pull.



2. REMOVE RACK AND RACK CARRIER

Front loading glass and dishwashers:
Go to step 3

Hood-type dishwashers:
Lift up the rack carrier and remove it.




3. EXECUTING DAILY CLEANING

- Open the door
- Remove strainer and stand pipe (where applicable)
- Wash under running water



Make sure that food residues do not enter pump intake.

- Clean machine interior including the bottom of the wash tank
- Place strainer and stand pipe (where applicable)

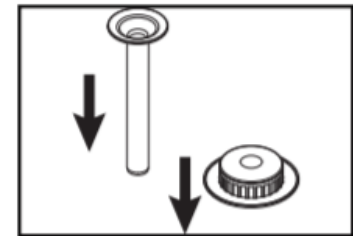

4. EXECUTING WEEKLY CLEANING

- Loosen the fastening screws (A) of the wash and rinse arms counterclockwise.
- Remove and clean wash and rinse arms
- Retighten the cleaning plug on the bottom of the wash arm
- Insert all parts again

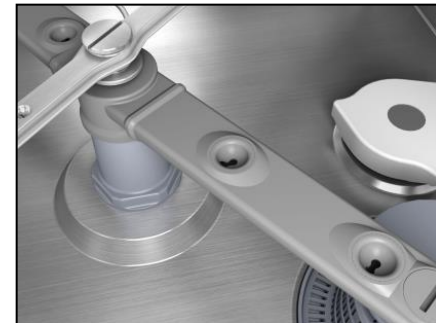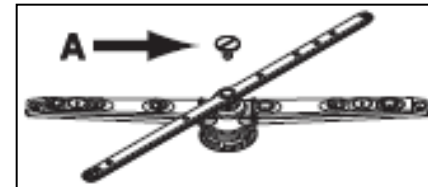

5. CLEANING OF THE WASH TANK BOTTOM

Clean the bottom of the wash tank carefully. There may be food residues.



6. POSITIONING OF TANK STRAINER & RINSE ARMS

Re-insert the cleaned strainers,
along with the wash and rinse
arms.

Insert stand pipe (if applicable).



7. LEAVE THE MACHINE OPEN

There is moisture on the inside of the machine due to residual water.

To allow air circulation, leave the door or hood of the machine open even when it is at a standstill.

This also avoids unpleasant odours developing.

